

INALSA


HOME APPLIANCES



Fiesta Lx



Food Processor

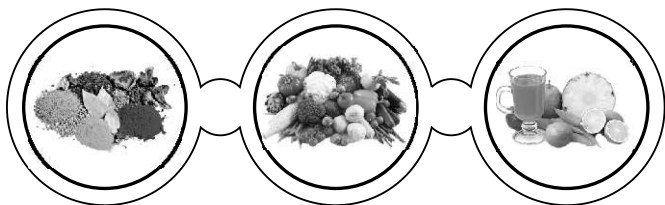

Instruction Manual

Dear Customer,


Congratulations! On the purchase of your **INALSA food processor**, this is designed to include many superior features that permit you the fullest expression of your **food processing** skill and enthusiasm. You are now on the threshold of a whole new world of **food processing** pleasure.

At INALSA, we have a reputation of manufacturing innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Juice Extractors, Cooktops, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA food processor** bears the same distinctive hallmark of excellence. It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA food processor** has a lot of thoughtful features built in to make your **food processing** convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA food processor**.

Welcome to the INALSA world of **food processing** pleasure!

Parts Identification

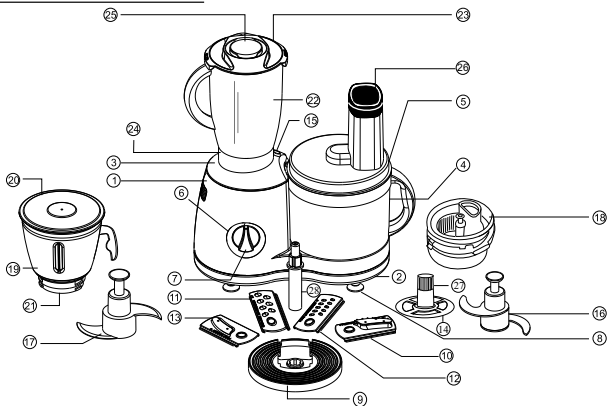

Part No.	Part Name	Part No.	Part Name
1.	Main body	16.	Chopper blade
2.	Bottom	17.	Atta kneading blade
3.	Top socket	18.	Centrifugal juicer
4.	Bowl	19.	D.G. jar
5.	Bowl cover	20.	D.G. lid
6.	Switch housing	21.	D.G. socket
7.	Switch knob	22.	B.L. jar
8.	Bottom pad	23.	B.L. lid
9.	Cutter disc	24.	B.L. socket
10.	French fries cutter	25.	B.L. stopper
11.	Coarse shredder	26.	Food pusher
12.	Fine shredder	27.	Egg whisker holder
13.	Fine slicer	28.	Stem rod
14.	Egg whisker		
15.	Release button		

Technical Specifications *

Model name	Fiesta
Voltage	230V AC-50Hz.
Motor	Universal
Power consumption	650 Watts
Rating (no load)	30 minutes continuous
Motor RPM at no load	18000
Cord plug	2-pin, 6A, 250V, PVC cord 1.75 M long
Speed control	3 speed with incher
Material of housing	ABS
Jar capacity	<ul style="list-style-type: none">• FP bowl- 1.0 litre• Liquidizer jar : 1.5 litre• Dry grinder jar : 1.0 litre
Attachments	<ul style="list-style-type: none">• Centrifugal juicer• French fries cutter• Fine slicer• Coarse shredder• Fine shredder• Aata kneading blade• Egg whisker blade• Chopper blade• Blender jar• Dry grinder jar
Overload protector	Manual re-setting type

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Instructions

Do's

1. Before connecting the appliance check the mains voltage comply with the voltage specified.
2. Place your food processor at a convenient height so that you can operate it easily. You should be able to look down into the attachments to check the circulation of the ingredients.
3. Clear out some space around the machine and keep food processor away from direct heat and sun.
4. Take care as the cutting edges of the blade cutters are very sharp.
5. Ensure that the bowl assembly is perfectly locked with the basic unit.
6. For unlocking the bowl cover turn the bowl cover clockwise by pressing the release switch on the upper base.
7. While using different jars, fix the bowl and bowl cover as the machine will not work till the bowl cover is in place.
8. While using centrifugal juicer place the juicer body with filter on to the drive shaft and rotate the filter till it is locked with the body.
9. Always use a spatula during processing of the food.
10. Keep the food processor away from the reach of the children.

Important Instructions

Don'ts

1. Do not apply undue pressure while using the coconut shredding disc.
2. Do not operate the centrifugal juicer unless juicer cover, filter is properly clamped with the juicer body.
3. Do not leave the food processor in running condition unattended.
4. Do not touch the moving parts during operation as they revolve at extremely high speeds and may cause injury.
5. Never allow the shredded, sliced or chipped food to touch the discs during operation. It could force the disc upwards and cause damage. If bowl begins to fill, empty it out in between.
6. Do not use fruits such as bananas & peaches which produce a thick paste that can clog the juicer filter.
7. Do not feed larger sized fruits into the feeder tube by force. This can overload the motor and juicer filter may get unbalanced.
8. Never lay a thin plastic sheet or cloth under the basic unit. It may get sucked up and block the ventilation holes in the base.
9. For juicing do not allow the cord to hang over the edges of the table, or touch hot surface.
10. Do not push food into the feeder tube by fingers while it is in operation. If fruit become clogged in the feeder tube, use pusher to push it down. If it doesn't work turn off the motor, unplug the unit, then disassemble the food processor to remove remaining food.
11. Do not immerse the appliance in water.
12. Do not attempt to repair the food processor at home or allow any unauthorized person to do it either, in the event of any service problem please call your nearest service center.


Before First Use

1. After unpacking the unit and before any use, make sure the mechanical parts of the unit and all its attachments are not damaged.
2. Wash the parts of the processor, especially those will come into contact with the fruits.
3. Carefully go through the instruction manual before starting the operation.

Important Instructions:


- Some parts of the food processor are oiled & greased for smooth operation of the machine, before first use, wash the parts of the processor thoroughly with soapy water.
- While grinding in dry grinding and chutney jar, customers are advised to keep one hand on the jar lid to avoid lid flying.

How to use

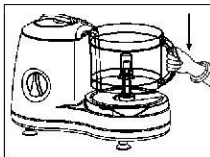

The Bowl

With the switch side of food processor facing you, hold the all purpose bowl by the handle and lower it onto the power drive shaft of the motor base, ensuring that the serrations given at the bottom of the bowl coincides with the arrow provides on the basic unit.

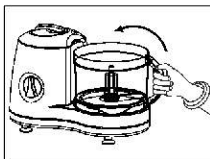


Turn anti-clockwise to lock the lugs on the basic unit, ensure that lugs are properly fitted in the slots provided on the bowl.



Blades


Lower the blade with centre knob onto the power drive shaft and rotate till it rests down.

The stainless steel blade and plastic blade settles low down inside, while the disc remain just above the rim of the bowl.

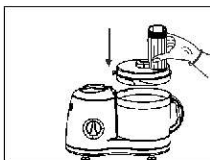


The bowl cover

Hold the bowl cover by the feeder tube and place it on the bowl pressing a little towards left of the bowl's handle, such that serrations given on the bowl cover coincide with the arrow given at the top of the bowl.

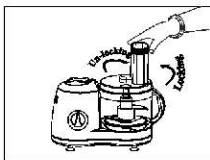

Slide the bowl cover anti-clockwise until it get locked in position. For unlocking the bowl cover, turn the bowl cover clockwise by pressing the release button on the top socket.


Note: As long as the bowl cover is locked into position, the unit will not switch 'ON'

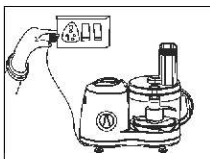

Connect the food processor to a wall AC outlet. The machine can be switched 'OFF' or 'ON' by shifting the rotary switch to different position.


Now, the food processor is ready for the action.

How to use

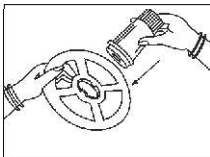


Whisker Disc

Hold the egg whisker disc with embossed written matter on top side and insert the holder into the disc.

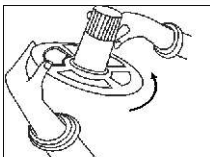


To lock the holder turn anti-clockwise.

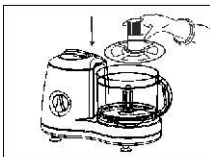

Fix the bowl over the basic unit and insert the whisker, assembly into drive shaft till it rests down.




Add the food material into the bowl. Lock the bowl cover on main bowl and start the unit.

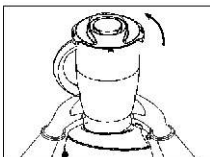

Liquidizer Jar & Dry grinding jar

Fit the liquidizer jar or dry grinder or chutney grinder jar on the left hand side of basic unit, by opening the top lid, then align the locks with the locking slots and turn anti-clockwise so that the jar locks into the position. Put the ingredients inside the liquidizer jar or dry grinder jar and close the lid.

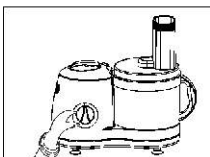

Switch 'ON' the machine. Turn the knob clockwise to the position 1, 2 & 3 as per requirement.

- Position 1 Low speed
- Position 2 Medium speed
- Position 3 High speed

To use as an incher turn the knob anticlockwise to the position '0'

How to use




Fill the liquidizer jar upto 3/4 of its capacity and switch 'ON' the unit. Ingredients can be added during operation, by removing the BL stopper provided on the lid. When the operation is over, switch 'OFF' the machine and remove the liquidizer jar, dry grinder jar or chutney jar by turning it clockwise.



Dry grinding

Once the dry grinder jar properly fits on the basic unit, put the ingredients (minimum upto 3/4th) & close the lid. To start with use pulse & then switch on and move to higher speed for fine grinding. Give break of minimum 1 min. after 3 min. running. Do not run the DG jar without lid.

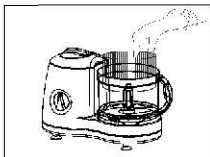


Centrifugal juicer

Fix the FP bowl on to the base.


Place the juicer body with filter on to the drive shaft & rotate the filter till it is locked in position with the body.



Align the markings provided on the juicer cover and the F.P. bowl, lower the juicer cover on to the bowl and rotate anticlockwise to lock it in position

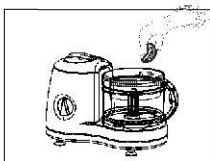



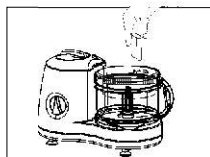


 




Switch on the unit & drop fruits in the feeder tube.



Push down ingredients with the help of food pusher. The juice will collect in the bowl whereas the pulp accumulates in the juicer body along with walls of the filter. For best results prepare small quantities at a time and clean the filter frequently. For cleaning, unlock and remove the filter, and wash it under running water.

Disc selection guide

Operations	Chopping blade 	Aata kneading blade 	Thin slicer 	Fine shredder 	Coarse shredder 	French fries cutter 	Egg-whisker 	Blender jar 	Dry grinder jar 	Centrifugal juicer 
Blending/Mixing										
Chipping										
Chopping										
Crumbing										
Crushing										
Wet grinding										
Dry grinding										
Chutney grinding										
Juicing (Hard Fruits & vegetables)										
Juicing (Citrus fruits)										
Julinining										
Kneading										
Mashing										
Mincing										
Pureeing										
Coarse shredding										
Fine shredding										
Coarse slicing										
Fine slicing										
French fries										
Coconut shredding/potato slurry										
Beating										
Whisking										
Churning										
Batter for cakes										
Whips										
Cuts										
Pulps										
Shells										

Cleaning and Maintenance of Food Processor, Bowl, Cover, Pusher

1. Take out the plug from the power supply. Remove the food pusher from the feeder tube. Then remove the bowl cover (lid) by pressing the black knob & rotating the lid clockwise. Lift off the lid.
2. Disassemble the bowl by holding the handle, turn clockwise and lift it off the basic unit.
3. Wash bowl, lid, pusher in water and dry it. To remove grease, use warm soapy water and scrub gently with a sponge.

Cleaning and Maintenance of Liquidizer Jar

1. Disassemble the jar by holding the handle turn clockwise and lift it off the basic unit.
2. Clean the blade housing and jar with soapy water. After cleaning, invert the jar on the table, insert the rubber washer and blade assembly into the jar and then fit on the housing & tighten anti-clockwise.

Dry Grinder Jar

After dry grinding, remove the contents and wipe the jar with a dry cloth before storing.

Food Processor Blade/Discs

Remove blades carefully from the container or bowl, holding the blade by its knob. Clean blades under the running water. Dry blades well, before storing.

Pulse Technique

Processing of the food should be done in short bursts than continuously this can be done by switching the machine 'ON' and 'OFF' intermittently through incher switch.

Safety Device

Over load Protractor

The food processor protects the motor against sudden over loads by tripping 'off' automatically. To re-start the machine allow the motor to cool down for two to five minutes.

To commence the operation press the red button of the OVER LOAD PROTECTOR located at the bottom of the of the Basic unit with the finger.