

INALSA

**SANDWICH
TOASTER**

**SUPERIA
SUPERIA GRILL
BRUNCH
BRUNCH GRILL**

Instruction Manual

Dear Customer,

Congratulations! On the purchase of your INALSA **Sandwich Toaster**, this is designed to include many superior features that permit you the fullest expression of your cooking skill and enthusiasm. You are now on the threshold of a whole new world of cooking pleasure.


At INALSA, we have a reputation of selling innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired INALSA **Sandwich Toaster** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your INALSA **Sandwich Toaster** has a lot of thoughtful features built in to make your cooking convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your INALSA **Sandwich Toaster**.

Welcome to the INALSA world of cooking pleasure!!

Parts Identification

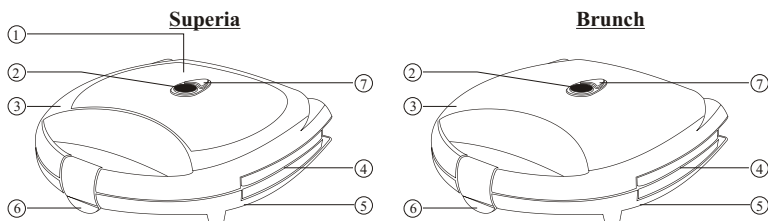

Part No.

Parts Name

- | | |
|----|---|
| 1. | SS Decoration (Available in Superia / Superia Grill model only) |
| 2. | Power indicator |
| 3. | Top cover |
| 4. | Cook plates |
| 5. | Bottom cover |
| 6. | Lock |
| 7. | Ready to cook indicator |

Technical Specification *

| Model | Superia / Superia Grill | Brunch / Brunch Grill |
|----------------|--|-----------------------|
| Top cover | Painted bakelite with SS decorative cover | Painted bakelite |
| Voltage | 230V, 50Hz, AC | |
| Wattage | 750W | |
| Cord Plug | PVC cord with 3 Pin moulded plug | |
| Cook plates | Aluminum die casted | |
| Type of plates | Triangle plate for Superia & Brunch | |
| | Grill plate for Superia Grill & Brunch Grill | |
| Coating | Non stick | |
| Indicators | ON / Ready | |

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Instructions

1. Please read the instruction manual thoroughly before using the appliance.
2. Some parts of the toaster have been slightly greased and as a result, the toaster might slightly smoke when used for the first time. After the short while however this will cease.

Do's

1. Before plugging the socket ensure that the supply voltage is in accordance with the rated one.
2. Always preheat the cooking plates before starting to cook.
3. While leaving even for a short while, always unplug the appliance.
4. Keep the toaster away from the children.
5. Always clean the appliance after use. First unplug and allow the heating plates to cool down completely. Keep the toaster open for fast cooling.
6. If the main cord of the appliance is damaged, it must only be replaced by an authorized service personnel.

Don'ts

1. Do not exceed the heating period even when the ready to cook light glow ON. This may cause excessive browning of the toast.
2. Do not use sharp or abrasive items in contact with the cooking plate as this may damage the non-stick coating.
3. Never put the power cord near to or in contact with hot surfaces of the toaster.
4. Never immerse the toaster in water.
5. Do not touch the heating plate while toasting as it may cause severe burns.
6. Never use the appliance if it is damaged in anyway.

Before First Use

1. Clean the cooking plates with a damp cloth or sponge.

How to Use

1. While using for the first time, clean.
2. Place the appliance on a flat surface.
3. Slightly grease the cooking plates with a little butter or cooking oil.
4. Plug in the appliance & heat up the plates until the green "ready to cook" pilot light glow ON.
5. The appliance is ready for use.
6. Prepare the ingredients for your toasted sandwich. For each sandwich you need two slices of bread and a suitable filling.
7. To obtain an even golden browning result, you can slightly butter the side of the bread in contact with the plates.

8. Place the first set of slices of bread with the buttered side on lower cooking plate, place your filling and cover with the set of second slices of bread with the buttered side up. You can also toast only one sandwich.
9. Lower the upper cooking plate carefully onto the bread until the sandwich toaster is tightly clamped.
10. Open the appliance after 2-3 minutes and check the browning. The cooking time required to obtain crisp, brown sandwiches depend on the type of bread and fillings.
11. Use a non-metallic utensil (e.g. wooden spatula) to remove the toasted sandwich. Do not use sharp or abrasive kitchen utensils.
12. Unplug the appliance from the wall socket after use.

Note: During cooking, the green "Ready to Cook" pilot light cycles ON and OFF to maintain the correct temperature of the appliance.

Practical Advice

1. For optimal result, filling should be proper and well placed within the sandwich slices.
2. Slightly grease the bread surface with butter for better toasting results.

Cleaning & Maintenance

1. Unplug the appliance and let it cool down before cleaning.
2. Clean the cooking plates with a damp cloth/ sponge. Avoid water running into the appliance

Caution:- Never immerse the appliance into water. Never use an abrasive cloth as it may damage the coating of the plate.