

INALSA

**QUARTZ
HEATER**

NEON V2

—+—

Instruction Manual

—+—

Dear Customer,

Congratulations! On the purchase of your **INALSA Quartz Heater**, this is designed to include many superior features that permit you the fullest expression of your living skill and enthusiasm. You are now on the threshold of a whole new world of living pleasure.


At INALSA, we have a reputation of manufacturing innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Quartz Heater** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Quartz Heater** has a lot of thoughtful features built in to make your living convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Quartz Heater**.

Welcome to the INALSA world of living pleasure!

Parts Identification

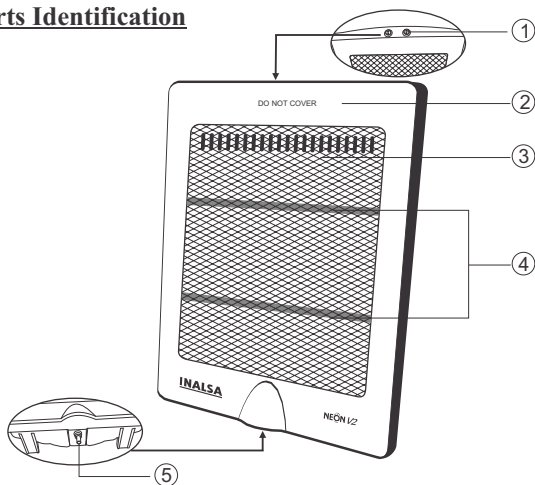

Part No.

Parts Name

- | | |
|----|------------------------|
| 1. | Heat selector switches |
| 2. | Body |
| 3. | Safety grill |
| 4. | Heating rods |
| 5. | Safety tip over switch |

Technical Specifications *

Product	Quartz Heater
Model	Neon V2
Wattage	800W (400W+400W)
Voltage	230V, 50Hz, AC
Plug	3 Pin plug with PVC cord
Tip over switch	Available

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Do's

1. Read all instructions before use.
2. The appliance must be placed on a flat and stable surface.
3. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 100 cm away from the heater.
4. The heater must be installed and kept vertically.
5. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
6. If the appliance does not work, switch it off without tampering with it. If any repair is required, please contact our service centre.
7. Before cleaning the appliance switch off and unplug the heater.
8. The appliance should always be used with an adult supervision.

Don'ts

1. Do not let children touch or play with the heater.
2. Do not use the appliance near liquids or inflammable material.
3. Do not locate the heater immediately below electrical switch panel.
4. If the cord of this appliance is damaged discontinue use of this product and contact the nearest authorised service centre.
5. Keep the heater clean. Do not allow any objects to enter the grill. As this may cause electric shock, or fire or damage to the heater.
6. The product should not be used for commercial purpose.
7. Do not immerse in water or any liquid.
8. Do not connect the appliance to extension cord or multiple outlets.
9. Do not put the cable on the appliance when it is still warm.
10. Never touch the appliance with wet or damp hands or feet.
11. Never expose the appliance to atmospheric conditions (rain, sun, etc.)
12. Do not touch the safety grill as this gets hot and can burn you.
13. Do not cover the appliance. If the appliance is covered, there is a fire risk.

Before First Use

Before switching on the appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance.

Operation

1. Plug in the appliance. Check that the outlet has at least 10 A current carrying capacity.
2. Select the heating power needed (400W/800W) by heating selector switch

Safety Device

This appliance is provided with two safety devices. The first safety device disconnects the appliance when the heater is tilted or when is tripped by means of a switch situated in the lower part of the heater. The second safety device disconnects the appliance in case of overheating by means of a thermal fuse.

Cleaning and Maintenance

1. After use and before cleaning always unplug the appliance and wait till the unit cools down.
2. Clean the grills from dust.
3. Clean the body frame with soft cloth.