

INALSA

ELECTRIC SHAVER

Impress

—+—
Instruction Manual
—+—

Dear Customer,

Congratulations on the purchase of your **INALSA Electric Shaver**! This has been designed to include many superior features that permit you the fullest expression of your skill and enthusiasm. You are now on the threshold of a whole new world of pleasure.

At INALSA, we have a reputation of selling innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Electric Shaver** bears the same distinctive hallmark of excellence.


It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Electric Shaver** has a lot of thoughtful features built in to make your life convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Electric Shaver**.

Welcome to the INALSA world of pleasure!

Parts Identification

Electric Shaver - Impress

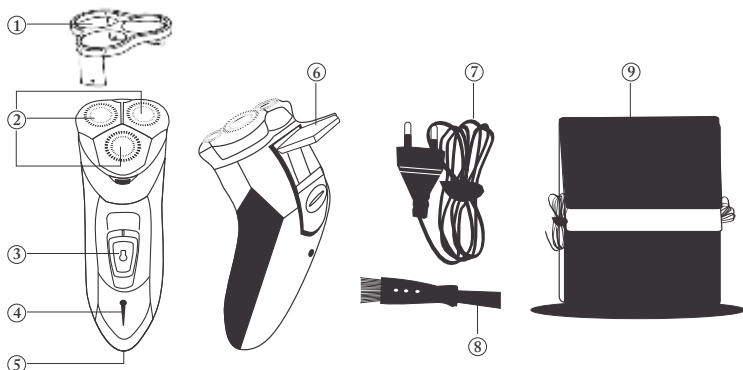

Part No.

Parts Name

- | | |
|----|--------------------------|
| 1. | Protective cap |
| 2. | Shaving cutters |
| 3. | On/Off switch |
| 4. | Charging indicator light |
| 5. | Charging port |
| 6. | Trimmer |
| 7. | Charging Adapter |
| 8. | Cleaning Brush |
| 9. | Travel Bag |

Technical Specification *

Model	Impress
Power	3W
Voltage	127-220V, ~, 50Hz
Battery	Ni-mh
Accessories	Travel bag, cleaning brush & charging adapter
Recharging time	8 hours
Operating time (At fully charged battery)	40 minutes

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Instructions

Please read operating instructions before using the appliance.

1. Before connecting the shaver make sure that the mains voltage is in accordance with the voltage specified.
2. Turn OFF the switch when charging.
3. The foil is made thin through precision finishing. Don't press it hard or strike it with hard substances for avoiding damages to the foil and scoring your skin.
4. The shaver is not intended to be used by children.
5. Use the shaver only for its intended use as described in this manual. Don't use attachments not provided along with the product.
6. Keep the cord away from hot or heated surface.
7. Don't Charge the shaver with its damaged adapter cord.
8. This appliance is not suitable for commercial use.



How to Charge:

1. Connect the charging adapter to the charging port.
2. The shaver can be connected to mains voltages 127-220 Volts, AC (Fig.-2, Fig.-3), the charging indicator light will glow.
3. It takes about 8 hours to charge the shaver completely.
4. Fully charged shaver will give a maximum of 40 minutes of cordless shaving time.
5. After charging, set the adapter wiring aside.



About the rechargeable battery:

To guarantee a long life of your rechargeable battery, please observe following requirements:

1. Charge and store the shaver at temperatures between 5°C and 35°C.
2. Do not leave the shaver connected for over 48 hours to the mains supply.



How to Use:

Shaving

1. Make sure the shaver is properly charged.
2. Remove the protective cap from shaver top. (Fig 4)
3. Press the on-off switch and now you can use the shaver.



fig4

4. Put the shaver sword meshwork clinging to the skin and move fast. You can carry out circle movement or ruleless movement. (Fig.-5)
5. Switch the shaving on by sliding the switch upwards.
6. Move the shaving heads quickly over the skin. Make both straight and circular movements.
7. Stretch the skin with your free hand.
8. Hair on the neck can also be shaved off in this way.

Please bear in mind that your skin may need two to four weeks to become fully accustomed to the unique shaving system.

9. Place the protective cap back on the shaver after use. (Fig.-6)

Trimming:

1. Open the back cover and pullout the trimmer. (Fig.-7)
2. Softly touch your skin in the right-angle direction with the trimmer and trim slowly.
3. After using, push down the switch.

Cleaning and Care:

1. Clean the shaving accessories once a week.
2. Turn off the switch and take off the shelter. Press the outer-cutter button and take off the outer cutter. Clean the beards on the outer cutter, the inner cutter and the body (1 time a week). After cleaning, assemble the outer cutter and the inner cutter on the original position and cover it with the shelter. (Fig.- 8-11)

Do not change the positions of 1, 2 and 3 and the directions of net cover so as to avoid the affection to the normal operation of razor.

Instruction on Environment Protection

- If you want to discard this razor, please open the back cover, unload the battery and take it to a place designated by the government for the protection of the environment.

