

INALSA

HAIR DRYER

Artico

—  —
INSTRUCTION MANUAL
—  —

Dear Customer,

Congratulations! On the purchase of your **INALSA Hair dryer**, this is designed to include many superior features that permit you the fullest expression of your living skill and enthusiasm. You are now on the threshold of a whole new world of living pleasure.


At INALSA, we have a reputation of manufacturing innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Hair dryer** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Hair dryer** has a lot of thoughtful features built in to make your living convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Hair dryer**.

Welcome to the INALSA world of living pleasure!

Parts Identification

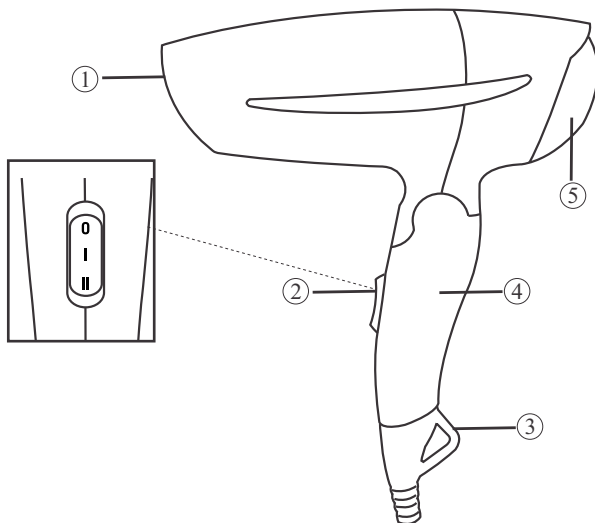

<u>Part No.</u>	<u>Parts Name</u>
1.	Hot air outlet
2.	Speed / heat selection
3.	Hanging loop
4.	Foldable handle
5.	Air inlet

Technical Specification *

Product	Hair dryer
Model	Artico
Voltage	240V, ~, 50Hz
Wattage	1200 watts
Cord plug	2 Pins, 16Amp, 250V, 1.5 meter long PVC cord
Air speed positions	Two
Heating positions	Two

* Due to continuous improvements in product, specifications are subject to change without prior notice.

How to use

1. Always ensure that the speed switch (2) is set to OFF position before plugging the unit in the power outlet.
2. Use high setting for drying hair & low setting for styling.
3. Plug in the hair drier to power socket specified in the technical specifications.
4. Adjust the desired position of speed switch.

Position 0 : OFF

Position 1 : For gentle drying and styling.

Position 2 : For quick drying.

Safety instructions

1. Read all instructions before using the hair dryer.
2. Only connect the hair dryer to a single-phase socket with a main voltage as specified on the rating plate.
3. The hair dryer should never be left unattended when plugged in.
4. Keep the cord away from heating surface.
5. Always unplug the hair dryer when not in use. Do not pull the cord to unplug the hair dryer.
6. Attachments & air outlet may be hot during use, allow them to cool before handling.
7. Switch OFF the appliance when not in use for long time.
8. Do not let animals or children touch or play with the hair dryer.
9. Do not cover. If covered, there is the risk of overheating.
10. If the cord of this appliance is damaged discontinue use of this product and contact the nearest authorised service centre.
11. Keep the hair dryer clean. Do not allow any objects to enter into the hair dryer as this may cause electric shock, fire or damage to the hair dryer.
12. Do not use the hair dryer for commercial purpose.
13. Do not immerse in water or any liquid.
14. Do not use the hair dryer while bathing.
15. Do not place or store the hair dryer where it can fall or be pulled into a tub or sink.
16. Do not direct hot air towards eyes or other heat sensitive areas.

Cleaning and maintenance

1. Before cleaning, always remove the plug from the electrical socket.
2. Clean the hair dryer with a soft dry cloth.
3. Never use abrasive powders or solvents for cleaning.

Important instruction

The hair dryer is fitted with a safety device which will switch it off in case of accidental overheating (eg. obstruction of air intake and outlet, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again.