

INALSA

**HAIR
STRAIGHTENER**

Trendy

— ❁ —
INSTRUCTION MANUAL
— ❁ —

Dear Customer,

Congratulations! On the purchase of your **INALSA Hair Straightener**, this is designed to include many superior features that permit you the fullest expression of your living skill and enthusiasm. You are now on the threshold of a whole new world of living pleasure.


At INALSA, we have a reputation of manufacturing innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Hair Straightener** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Hair Straightener** has a lot of thoughtful features built in to make your living convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Hair Straightener**.

Welcome to the INALSA world of living pleasure!

Parts Identification

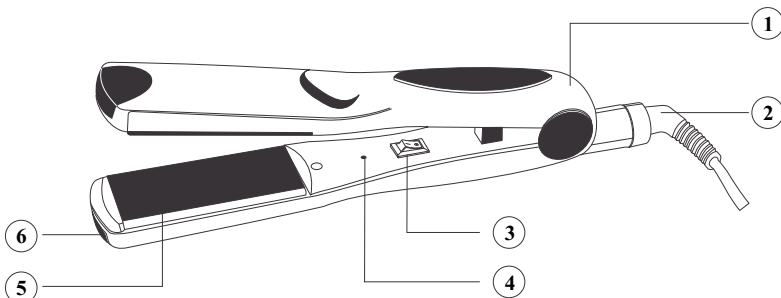

<u>Part No.</u>	<u>Parts Name</u>
1.	Body top
2.	360° rotating cord
3.	ON/OFF switch
4.	Power indicator
5.	Solid ceramic plate
6.	Body bottom

Technical Specification *

Product	Hair straightener
Model	Trendy
Voltage	110-220V, 50Hz, AC
Wattage	45 watts
Cord plug	2 Pins moulded plug with 2 meters long PVC cord
Heating position	ON/OFF

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Safeguards

When using electrical appliances, take basic safety precautions including:-

1. Children cannot recognize the dangers involved in the incorrect use of electrical appliances. Therefore never allow children to use household appliances without supervision.
2. Hair lacquers and fixing sprays contain flammable material. Do not spray while using the appliance.
3. Do not direct hot air from the appliance towards the eyes or other areas sensitive to heat such as the face and neck..We recommend wrapping a towel round the neck.
4. Take special care when using the appliance near children or anyone who is insensitive to heat. Anyone with a reduced sensitivity to heat may not realize when too much heat is directed towards the skin, and may suffer as a result.
5. Store and use the appliance out of reach of children.
6. Switch the appliance off before putting it down, even if it's "just for a minute"
7. Do not leave the appliance unattended while plugged in.
8. Remove any blockage to the heating part of the appliance.
9. After using of the appliance, allow them to cool down which to avoid burning your fingers.
10. Let the appliance cool down before cleaning and storing away.
11. Do not use the appliance for any purpose other than those described in these instructions.
12. Do not use the appliance within 1m of any other electrical or electronic appliance (e.g. TV, computer, telephone) as it may cause interference.
13. Do not twist or kink the mains lead, and do not wrap it around the appliance.
14. Do not operate the appliance after it malfunctions or if the mains lead or plug is damaged. There are no user-serviceable parts.
15. Incorrect operation and improper use can damage the appliance and cause injury to the user.

Household Use Only

Special safety instructions for this device

1. Keep the device away from water and moisture such as, bath tubs, shower areas or even persons taking a bath! Such situations constitute a **DANGER TO LIFE!** Through electric shock.
2. **Attention:** The unit becomes hot during operation.
3. If the appliance is used in the bathroom, remove the mains plug after use as water represents a hazard. This also applies when the appliance is switched off.

Safety Information

1. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
2. Before plugging in the appliance, check that the current and power match those given on the rating plate.
3. **Warning:** Do not put the appliance or the plug in water or any other liquid. This could cause a fatal electric shock.. If the appliance or plug should accidentally become wet, unplug the appliance immediately and have it checked by an electrician before using it again.

4. Check the cable and the plug regularly for any possible damage.
5. Do not allow the cable to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
6. Make sure that there is no danger that the cable or extension cable may inadvertently be pulled or cause anyone to trip when in use.
7. This appliance is not suitable for commercial use nor for use in the open air.
8. Always remove the plug from the socket when the appliance is not use and each time before it is cleaned.
9. Never use the cable to carry the appliance.



How to Use

1. Connect to the power supply.
2. Push the switch to “ON” position. You can use the appliance when it get to the temperature you prefer and the power light change from red to green..It's normal that the light colour change when the appliance is operating.
3. For complete styling, hair should be clean, dry and free from dirt, hair spray and cream etc.
4. Dry your hair with a hairdryer until it's completely dry before you use the Straightener.
5. Open the plates and spread the 5cm hair section between the plates ad press.
6. Do not touch the hot plates, Press and slide the appliance from the scalp towards the ends slowly. Repeat if necessary.
7. Allow hair Straightener to cool off.

Note: Keep the heated parts away from scalp, face, neck and hands.

Cleaning and Care

1. It is essential to keep the safety instructions.
2. Clean the outer surfaces using a soft, damp cloth and a gentle cleaner.
3. Never use abrasive cleaners or sharp objects (e.g. steel wool)
4. Do not wind the power cord around the appliance.

Instructions on Environment Protection

Do not dispose of this product in the usual household garbage at the end of its life cycle; hand it over at a collection point for the recycling of electric appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in its marking .By recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment. Please inquire at the community administration for the authorized disposal location.