

INALSA

**ELECTRIC
KETTLE**

TravelMate N

INSTRUCTION MANUAL

Dear Customer,

Congratulations on the purchase of your **INALSA Electric Kettle**! This has been designed to include many superior features that permit you the fullest expression of your skill and enthusiasm. You are now on the threshold of a whole new world of pleasure.


At INALSA, we have a reputation of providing innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired **INALSA Electric Kettle** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your **INALSA Electric Kettle** has a lot of thoughtful features built in to make your life convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your **INALSA Electric Kettle**.

Welcome to the INALSA world of pleasure!

Parts Identification

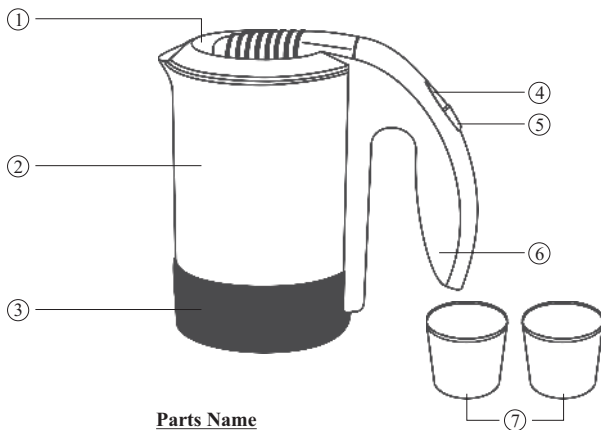

Parts No.

Parts Name

- | | |
|----|-------------------------|
| 1. | Lid |
| 2. | Stainless steel housing |
| 3. | Base |
| 4. | Switch ON knob |
| 5. | Switch OFF knob |
| 6. | Handle |
| 7. | Cup |

Technical Specification*

Model	TravelMate N
Wattage	1000W
Voltage	230V, 50Hz AC.
Capacity	500 ml
Cord Plug	3 pin plug with PVC cord 0.65mtr long
Housing	SS brush finish
Heating element	Concealed type
Accessories	2 Cups

* Due to continuous improvements in product, specifications are subject to change without prior notice.

Important Instructions

Do's

1. Before plugging the socket, ensure that the supply voltage is in accordance with the rated one.
2. Place the appliance on a stable level and heat resistant surface, away from hot surfaces and naked flame.
3. The kettle becomes very hot during use; so hold it by the handle only.
4. Avoid contact with steam coming out of the spout area when pouring the water and, out of the lid when refilling the water.
5. Ensure that the main cable does not hang over the sharp edges and keep it away from hot objects and open flames.
6. Always make sure that lid is properly closed during the boiling operation.
7. Keep the appliance away from the children.
8. Keep the bottom of kettle away from dampness and splashes.
9. In case of any defect, contact the nearest authorized dealer/ service center.

Don'ts

1. Do not overfill! Check the level indicator (MAX) inside the main body while filling water. If the kettle is overfilled, boiling water may be ejected.
2. Do not remove the lid while the water is boiling.
3. Never leave the kettle unattended during operation.
4. This kettle is not intended for use by small children or insane person without proper supervision.
5. Do not operate the kettle if the cord plug shows the signs of damage.
6. Do not immerse the kettle in water. For cleaning always use wet cloth.

Before First Use

1. After unpacking the unit and before any use, make sure the mechanical parts of the kettle and its attachments are not damaged.
2. Clean the kettle by filling it with clean water and bringing to boil. Pour away the water afterwards.
3. Carefully go through the instruction manual before starting the boiling operation.

How to Use

1. Open the lid and pour in the desired quantity of water. While doing so, watch the water level mark inside the kettle. Never go above the maximum (MAX.) mark.
2. Secure the lid on the kettle properly.
3. Plug in the unit and then switch ON. The power indicator light will glow 'ON', that means the boiling process has started.

4. When the water boils, the appliance will shut off power automatically and the indicator light will go OFF.
5. When the water boils, the temperature control mechanism operates and stop the boiling operation. The boiling operation can be started again by pressing switch ON knob after 40-50 seconds.
6. During any time of water boiling process, the kettle can be switch OFF by pressing the switch OFF knob.
7. Unplug the kettle from the socket when not in use.

Boil Dry Protection

In case you switch 'ON' the kettle with too little water, auto shut off device will automatically operate within 10-15 seconds after whole water is evaporated and kettle is switched OFF. Let the kettle cool down before refilling and then press the restart button to start the boiling process again. If you find drops of water under the kettle, do not worry as it is just condensation.

Warning

1. This kettle is meant for boiling water ONLY.
2. This kettle is for domestic use ONLY.

Cleaning and Maintenance

1. Always remove the plug from the mains socket before cleaning and let the kettle to cool down completely.
2. Descale at regular intervals. Use a descaling agent.
3. Clean the outside of the kettle with a soft dry cloth. Do not use any abrasive material for cleaning the kettle.
4. The kettle must be dried completely before storage.
5. In case of any defect do not tamper with the appliance yourself. Contact the nearest authorized dealer / company service center.