

# **INALSA**

---

**SANDWICH MAKER**

**Multi meal**

---

INSTRUCTION MANUAL

---

Dear Customer,

Congratulations on your purchase of INALSA **Multimeal** !

This appliance is designed to include many superior features that permit you the fullest expression of your cooking skill and enthusiasm. You are now on the threshold of a whole new world of cooking pleasure.


At INALSA, we have a reputation of selling innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Microwave Ovens, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired INALSA **Multimeal** bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your INALSA **Multimeal** has a lot of thoughtful features built in to make your cooking convenient. Please read all instructions carefully, so that you may get the best out of the power packed features in your INALSA **Multimeal**.

Welcome to the INALSA world of cooking pleasure!!

## Parts Identification

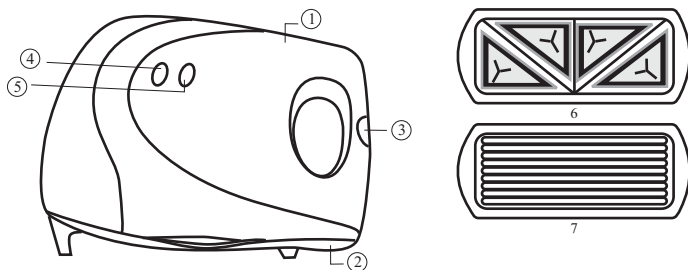

<u>Part No.</u>	<u>Parts Name</u>
1	Top cover
2.	Bottom cover
3.	Lock
4.	Ready to cook indicator
5.	Power indicator
6.	Triangle plate
7.	Grill plate

## Technical Specifications\* :

Model	Multimeal
Voltage	230V AC-50Hz.
Wattage	750 Watts
Plug	3 Pin, 6A, 250V
Cord	PVC cord 0.85m long
No. of heating plates	2 Grill & 2 Triangle
Type of coating	Non-stick
Material of top and bottom	Bakelite

\* Due to continuous improvements in products, specifications are subject to change without prior notice.

## **Important Instructions**

Please read all operating instructions before using the appliance.

### **Do's**

1. Before plugging the socket ensure that the supply voltage is in accordance with the rated one.
2. Always preheat the sandwich maker before starting to cook.
3. While leaving, even for a short while, always unplug the appliance to avoid the possibility of fire.
4. Children are not aware of the danger that can be caused by the electrical appliance. Therefore close supervision is necessary when the appliance is operated by or near children.
5. If the appliance is damaged, it must only be replaced by an authorized service personnel.
6. Avoid exposure of sandwich maker to heated surfaces or direct heat.

### **Don'ts**

1. Do not operate the sandwich maker near flammable materials such as curtains, wall fabric, etc. as this could cause fire.
2. Do not push the detachable plate lock to open it when the appliance is in use.
3. Oversized foods, metal foil packages or any utensils must not be inserted in the sandwich maker as they may damage the non-stick coating of the heating plates.
4. Do not use sharp or abrasive items in contact with the cooking plate as this may also damage the non-stick coating.
5. Never put the power cord near to or in contact with hot surfaces of the sandwich maker.
6. Never immerse the sandwich maker in water.
7. Do not touch the heating plate while cooking as it may cause severe burns.
8. Never use the appliance if it is damaged anyway.

### **Before First Use**

After unpacking the unit and before any use, clean the surface of the plates with a damp cloth and some dish soap.

## **How to Use**

1. Plug in and red light will glow ON. This indicates that the appliance is working. Let the appliance heat up sufficiently until the green light glows ON.
2. Slightly grease the heating plates with butter or cooking oil.
3. Now the appliance is ready for use.
4. Prepare the ingredients for your sandwich. For each sandwich or grill sandwich you need two slices of bread and a suitable filling.
5. The browning of the bread depends on the amount of filling used. To get better results, butter the sides of the bread in contact with the heating plates.
6. Lower the top heating plate on to the bread and lock the appliance.
7. When the green light glows 'ON' again, your sandwich is ready.
8. To make grill sandwiches, replace the sandwich plates with Grill plates.
9. Use a non-metallic spatula to remove the sandwich. Do not use sharp or abrasive things as they may damage the non-stick coating.
10. Unplug the appliance after use.

## **Practical Advice**

1. For optimal results, filling should be proper and well placed within the sandwich slices.
2. Slightly grease the bread surface with butter to obtain better results.

## **Cleaning and Maintenance**

1. Always remove the plug from the mains socket before cleaning the base. Allow it to cool down.
2. Push the detachable plate locks, and take off the two plates.
3. Wipe the plates with absorbing paper towel or a wet soft cloth. They can also be cleaned under running water with soap water. Always wipe with a dry cloth before placing it back.